

**WIRING DIAGRAMS**  
**Selected Block**  
1991 Ford Taurus  
For <http://www.mitchell.narod.ru/>  
Copyright © 1997 Mitchell International  
Friday, March 02, 2001 02:23PM

1991 Wiring Diagrams  
Ford Motor Co.

Sable & Taurus

**COMPONENT LOCATION MENU**

COMPONENT LOCATIONS TABLE

AA

Component	Figure No. (Location)
A/C CLUTCH CYCLING PRESSURE SWITCH	10 (C 36)
A/C COMPRESSOR CLUTCH (2.5L)	3 (B 9)
A/C COMPRESSOR CLUTCH (3.0L EFI)	4 (A 14)
A/C COMPRESSOR CLUTCH (3.0L SHO)	6 (B 22)
A/C COMPRESSOR CLUTCH (3.8L)	6 (D 21)
A/C/HEATER FUNCTION SELECT SWITCH	10 (C 37)
AIR BAG DIAGNOSTIC MODULE	9 (D-E 32-35)
ALTERNATORS	2 (A 7, C 7, E 7)
ALT OUTPUT CONTROL RELAY	2 (D 6-7)
ABS SYSTEM	9 (A-D 32-35)
AUTOLAMP DUAL COIL RELAY	12 (E 47)
AUTOLAMP SYSTEM	12 (D-E 44-47)
BACKUP LIGHT SWITCH	15 (D 56-57)
BAP SENSOR (3.0L SHO)	6 (A 20-21)
BATTERIES	2 (A 5, C 5, D 5)
BLOWER MOTORS	10 (A 39, C 39, E 39)
CIGAR LIGHT ASSY	12 (C 44)
CLOCK	12 (C 47)
CLUTCH INTERRUPT SWITCH	8 (B 31)
CLUTCH SWITCH (3.0L SHO)	6 (B 21)
COOLING FAN (2.5L)	3 (A 9)
COOLING FAN (3.0L EFI)	4 (A 13)
COOLING FAN (3.0L SHO)	6 (C 23)
COOLING FAN (3.8L)	6 (C 20)
COURTESY LIGHTS	12 (A-D 44-47)
CRUISE CONTROL AMP	6 (D-E 23)
CRUISE CONTROL SERVO	6 (E 22, E 23)
CRUISE CONTROL SWITCH	6, 11 (D 23, D 43)
DE-ICE ILLUMINATION LIGHT	12 (A 46)
DIS MODULE	5 (D 16)
DOME LIGHT	12 (B 47)
DOME/MAP LIGHT	12 (A-B 47)
DOOR AJAR SWITCHES	13 (C 49)
DUAL BRAKE WARNING SWITCH	13 (C 48)
EATC CONTROL ASSY	10 (A-B 36)
ELECTRONIC ENGINE CONTROL (EEC) (2.5L)	3 (B-E 8)
ELECTRONIC ENGINE CONTROL (EEC) (3.0L EFI)	4 (B-E 12)
ELECTRONIC ENGINE CONTROL (EEC) (3.0L SHO)	5 (A 16-19)
ELECTRONIC ENGINE CONTROL (EEC) (3.8L)	7 (A-D 24)
ELECTRONIC FLASHER	11 (C 43)

# WIRING DIAGRAMS

## Selected Block (p. 2)

1991 Ford Taurus

For <http://www.mitchell.narod.ru/>

Copyright © 1997 Mitchell International

Friday, March 02, 2001 02:23PM

ENGINE COMPARTMENT LIGHT	1 (C 2)
ENGINE SENSORS (3.0L SHO)	6 (A 20-21)
FOG LIGHT RELAY	1 (C-D 3)
FOG LIGHT SWITCH	11 (E 43)
FOG LIGHTS IN-LINE FUSE	1 (D 3)
FUEL PUMPS	3, 4, 6 (A 9, A 12, C 21, D 21)
FUSE LINKS	3, 8 (A-E 4-7, C 30)
FUSE BLOCK	8 (D 29-30)
GLOVE BOX LIGHT	12 (A 46)
HEATED WINDSHIELD	10 (E 39)
HEATED WINDSHIELD CONTROL MOD	10 (D 39)
HEATER FUNCTION SELECT SWITCH	10 (B 36)
HEGO SENS (2.5L)	3 (B 9)
HEGO SENS (3.0L EFI)	4 (E 14)
HEGO SENSORS (3.0L SHO)	5 (E 18)
HEGO SENSORS (3.8L)	7 (E 25-26)
HIGH LEVEL STOP LIGHT	15 (D 57)
HORN RELAY	11 (D 41)
HORN SWITCH (SHO)	11 (D 43)
HORN SWITCH (EXCEPT SHO)	6 (C 22)
IGNITION COIL (2.5L)	3 (B 11)
IGNITION COIL (3.0L EFI)	4 (B 15)
IGNITION COIL (3.0L SHO)	5 (D 16)
IGNITION COIL (3.8L)	7 (E 27)
IGNITION SWITCH	8 (A-C 28)
ILLUM ENTRY TIMER	12 (D 44)
INERTIA SWITCHES	3, 4, 6 (A 8, A 12, C 22, D 22)
INSTRUMENT CLUSTER	13 (A-E 48-51)
INSTRUMENT PANEL DIMMING RHEOSTAT	12 (D 47)
INTEGRATED CONTROL MOD (ICM) (2.5L)	3 (A-B 11)
INTEGRATED CONTROL MOD (ICM) (3.0L EFI)	4 (A-B 15)
INTEGRATED CONTROL MOD (ICM) (3.0L SHO)	6 (A 22-23)
INTEGRATED CONTROL MOD (ICM) (3.8L)	6 (E 20-21)
INTERVAL WIPER/WASHER MODULE	11 (E 40)
KEYLESS ENTRY SYSTEM	14 (A-C 53-55)
KNOCK SENSOR	6 (A 20)
LCD DIMMING RELAY	12 (A 47)
LEFT FRONT DOOR COURTESY LIGHTS	12 (C 44)
LIFTGATE MERCURY SWITCH	12 (B 44)
LOOK CYLINDER ILLUMINATION	12 (C 45-46)
LOW OIL LEVEL RELAY	13 (B 51)
LIGHT SENSOR AMPLIFIER	12 (E 46)
LIGHTS OUT WARNING MODULE	11 (A 43)
LUGGAGE COMPARTMENT LIGHT	15 (A 56)
LUMBAR SEATS	14 (E 53)
MAIN LIGHT SWITCH	12 (E 44)
MANUAL POSITION SENSOR (MLPS)	8 (B 31)
MOONROOF	15 (B-C 56)
MULTI-FUNCTION SWITCH	11 (A-D 40)
PARKING BRAKE SWITCH	13 (B 48)
POLICE ACCY RELAY	15 (B 56)
POWER ANTENNA	15 (D 56)

# WIRING DIAGRAMS

## Selected Block (p. 3)

1991 Ford Taurus

For <http://www.mitchell.narod.ru/>

Copyright © 1997 Mitchell International

Friday, March 02, 2001 02:23PM

POWER DOOR LOCKS (WITH KEYLESS ENTRY) .....	14	(A 52-55)
POWER DOOR LOCKS (WITHOUT KEYLESS ENTRY) .....	15	(A 57-59)
POWER MIRRORS .....	14	(D-E 54-55)
POWER SEATS .....	14	(D-E 52-54)
POWER WINDOW SAFETY RELAY .....	14	(A 52)
POWER WINDOWS .....	14	(B-D 52-53)
RADIATOR COOLANT SENSOR .....	13	(C 51)
RADIO (PARTIAL) .....	10	(E 36)
REAR DOOR COURTESY LIGHTS .....	12	(A-B 44)
REAR WINDOW DEFOG CONTROL .....	11	(E 43)
REAR WIPER/WASHER SYSTEM .....	15	(E 56-57)
SELF TEST OUTPUT (STO) CONN (2.5L) .....	3	(B 10)
SELF TEST OUTPUT (STO) CONN (3.0L EFI) .....	4	(B 14)
SELF TEST OUTPUT (STO) CONN (3.0L SHO) .....	5	(E 18-19)
SELF TEST OUTPUT (STO) CONN (3.8L) .....	7	(A 27)
STARTER RELAYS .....	2	(A-E 4)
STOP LIGHT SWITCH .....	11	(C 43)
STEERING WHEEL CONTROL SWITCH (SHO) .....	11	(D 43)
THROTTLE POSITION SENSOR (SHO) .....	6	(A 20)
VANITY LIGHTS .....	12	(A 47)
VARIABLE ASSIST POWER STEERING (VAPS) .....	1	(E 3)
VEHICLE SPEED SENSOR .....	5, 6	(A 16, E 22)
WARNING CHIME MODS .....	10	(E 37-38)
WASHER FLUID LEVEL SWITCH .....	1	(B-C 3)
WIPER MOTOR .....	1	(A 3)
AA		

# WIRING DIAGRAMS

# WIRING DIAGRAMS

## Selected Block (p. 4)

1991 Ford Taurus

For <http://www.mitchell.narod.ru/>

Copyright © 1997 Mitchell International

Friday, March 02, 2001 02:23PM

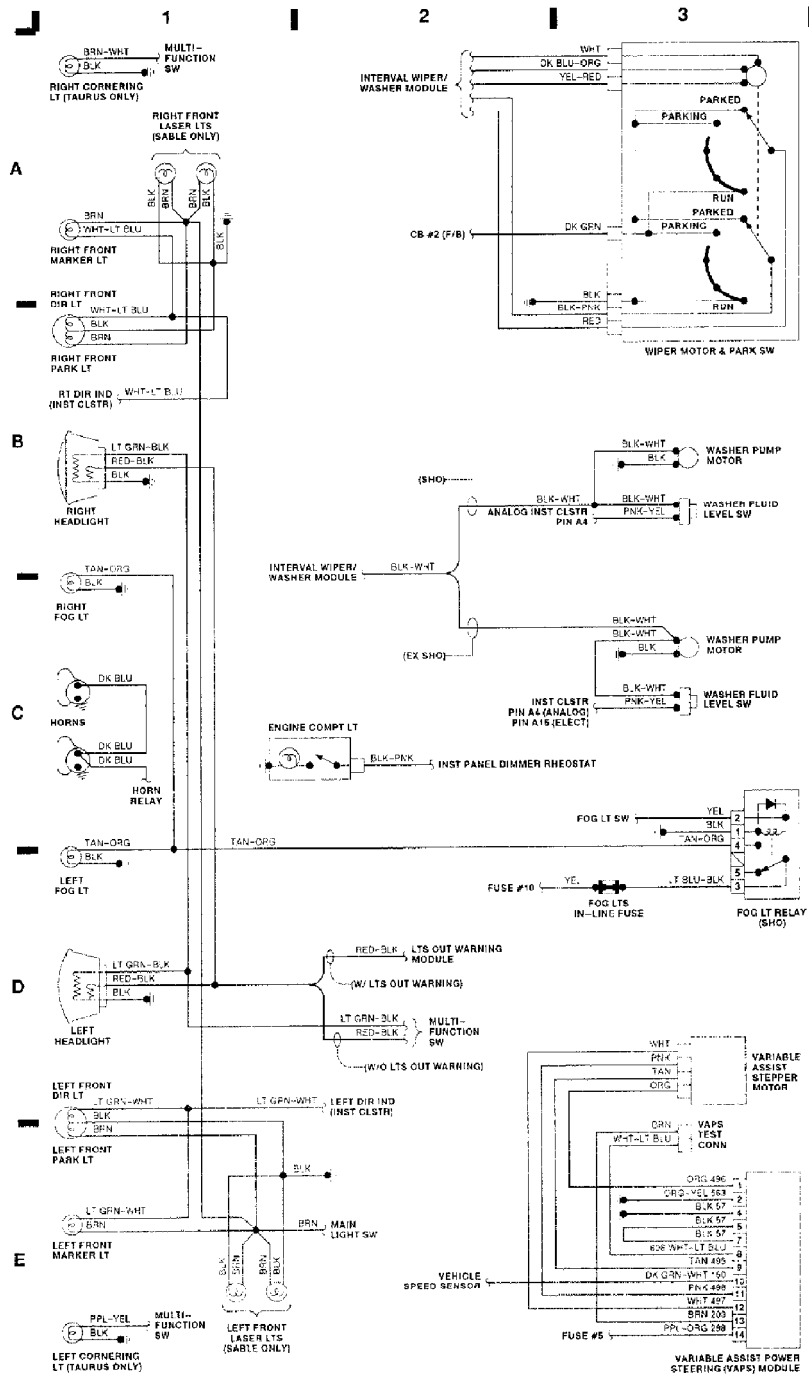


Fig. 1: Headlights & Washer/Wiper, VAPS (Grid 1-3)

