

**WIRING DIAGRAMS**  
**Selected Block**  
 1992 Ford Taurus  
 For <http://www.mitchell.narod.ru/>  
 Copyright © 1997 Mitchell International  
 Friday, March 02, 2001 02:25PM

1991 Wiring Diagrams  
 Ford Motor Co.

Sable & Taurus

**COMPONENT LOCATION MENU**

COMPONENT LOCATIONS TABLE

AA

Component	Figure No. (Location)
A/C & HEATER SYSTEM .....	13 (A-D 51)
AIR BAG SYSTEM .....	14 (A-C 52-55)
ALTERNATORS .....	2 (C 7)
ANTI-LOCK BRAKE SYSTEM .....	12 (A-E 44-47)
AUTOLAMPS .....	16 (D-E 61-63)
BATTERY .....	2 (A 6)
BRAKE FLUID LEVEL SWITCH .....	17 (C 64)
CLOCKSPRING/SLIP RING ASSEMBLY .....	10 (D 39)
CLUTCH INTERRUPT START SWITCH (3.0L SHO) .....	2 (B 6)
COOLING FAN:	
(3.0L SHO) .....	6 (E 22)
(3.0L) .....	4 (E 13)
(3.8L) .....	8 (E 30)
COURTESY LIGHTS .....	16 (A-C 60-63)
CRUISE CONTROL SYSTEM .....	10 (A-C 39)
DISTRIBUTORLESS IGNITION SYSTEM, (DIS) MODULE (3.0L SHO) .....	5 (D 19)
EATAC CONTROL SYSTEM .....	13 (A-D 48)
ELECTRONIC ENGINE CONTROL (EEC) MODULE:	
(3.0L) .....	3 (A-D 8)
(3.0L SHO) .....	5 (A-D 16)
(3.8L) .....	7 (A-D 24)
ENGINE COMPARTMENT FUSE BLOCK (F/B) .....	2 (C-E 4)
ENGINE COMPARTMENT LIGHT .....	2 (A 6)
FOG LIGHT IN-LINE FUSE .....	1 (C 2)
FOG LIGHT RELAY (3.0L SHO) .....	1 (C 2)
FOG LIGHT SWITCH .....	15 (C 59)
FUEL PUMP/FUEL GAUGE SENDER .....	21 (B 80)
FUSE BLOCK (F/B) .....	9 (C-D 33-34)
GEAR SELECT SWITCH (EXCEPT 3.0L SHO) .....	14 (C-E 55)
HEADLIGHTS (3.0L SHO) AND (EXCEPT 3.0L SHO) .....	1 (A-E 1-3)
HEATER SYSTEM .....	13 (E 48-51)
HEGO SENSORS:	
(3.0L SHO) .....	6 (A 21)
(3.0L) .....	4 (A 15)
(3.8L) .....	8 (A 31)
HORN RELAY .....	10 (E 39)
IGNITION COIL:	
(3.0L) .....	3 (E 11)
(3.8L) .....	7 (D 27)

# WIRING DIAGRAMS

## Selected Block (p. 2)

1992 Ford Taurus

For <http://www.mitchell.narod.ru/>

Copyright © 1997 Mitchell International

Friday, March 02, 2001 02:25PM

IGNITION SWITCH .....	9 (A 32-35)
ILLUMINATED ENTRY TIMER .....	16 (D 60)
INERTIA SWITCH:	
(3.0L SHO) .....	6 (D 22)
(3.0L) .....	4 (C 15)
(3.8L) .....	8 (A 29)
INSTRUMENT PANEL DIMMING RHEOSTAT .....	16 (D 63)
INSTRUMENT CLUSTER:	
(ANALOG/SHO) .....	17 (A 64-67)
(DIGITAL) .....	17 (E 64-67)
INTEGRATED RELAY CONTROLLER MODULE:	
(3.0L SHO) .....	6 (C-D 23)
(3.0L) .....	4 (C-E 15)
(3.8L) .....	8 (C-E 31)
INTERVAL GOVERNOR .....	15 (E 56)
KEYLESS ENTRY SYSTEM .....	20 (B-E 79)
LAMP OUT WARNING MODULE .....	15 (A 59)
LIFTGATE RELEASE .....	18 (D 68-69)
LOW OIL LEVEL RELAY .....	17 (B 67)
MAIN LIGHT SWITCH .....	16 (E 60)
MOONROOF .....	18 (E 68-71)
MULTI-FUNCTION SWITCH .....	15 (A-D 56)
POLICE ACCESSORY RELAY .....	2 (B 4)
POWER ANTENNA MODULE .....	18 (D 68)
POWER DOOR LOCKS:	
(WITH KEYLESS ENTRY) .....	20 (A 76-79)
(WITHOUT KEYLESS ENTRY) .....	19 (A-B 72-75)
POWER MIRROR SWITCH .....	20 (E 76)
POWER SEATS .....	19 (C-E 75)
POWER WINDOWS .....	19 (C-E 72-74)
RADIATOR COOLANT SENSOR (3.0L SHO) .....	17 (C 67)
REAR WINDOW DEFOGGER .....	18 (A-C 68-71)
REAR WIPER WASHER .....	18 (B-D 71)
SEAT BELT SWITCH .....	14 (C 52)
SELF TEST OUTPUT (STO) CONNECTOR:	
(3.0L SHO) .....	6 (C 20)
(3.0L) .....	4 (C 12)
SHIFT LOCK ACTUATOR .....	14 (D 52)
STARTER MOTOR .....	2 (A 7)
STOP LIGHT SWITCH .....	15 (A 56)
VARIABLE ASSIST POWER STEERING (VAPS) MODULE .....	2 (E 7)
VEHICLE SPEED SENSOR .....	2 (C 7)
WARNING CHIME MODULE .....	14 (C 52)
WINDSHIELD WIPER/WASHER SYSTEM .....	15 (D-E 56-59)
AA	

### GROUND LOCATION MENU

#### GROUND LOCATIONS TABLE

AA

Component

Figure No. (Location)

